



E-mail Alert

User Manual

E-mail Alert

E-mail Alert

Enabled

Mail Server :	<input type="text"/>	(Name or IP Address)
E-mail :	<input type="text"/>	
Log Queue Length :	<input type="text" value="50"/>	entries
Log Time Threshold :	<input type="text" value="10"/>	minutes

Send Log to E-mail

- Enabled :** If this option is selected, E-mail Warning will be enabled.
- Mail Server :** If users wish to send out all the logs, please enter the E-mail server name or the IP address; for instance, mail.abc.com .
- E- mail :** This is set as system log recipient email address such as abc@mail.abc.com.
- Log Queue Length :** Set the number of Log entries, and the default entry number is 50. When this defined number is reached, it will automatically send out the log mail.
- Log Time Threshold :** Set the interval of sending the log, and the default is set to 10 minutes. Reaching this defined number, it will automatically send out the Mail log.
- The device will detect which parameter (either entries or intervals) reaches the threshold first and send the log message of that parameter to the user.
- Send Log to E- mail :** Users may send out the log right away by pressing this button.